

Clutch gearbox

Fig.522






Introduction

Read and follow this manual carefully to ensure safe and reliable use. Improper installation or operation may cause damage or injury; the manufacturer or distributor cannot be held responsible.

Always check the latest technical datasheets and documentation to verify dimensions, materials, pressure/temperature ratings and application limits at www.coreline.dk.

Requirements for the maintenance staff

Personnel must be trained and qualified to assemble, operate and maintain the product safely, and follow all relevant safety standards and local regulations.

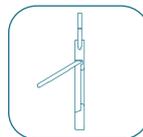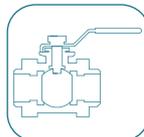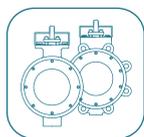

Introduction

Coreline Fig.522 manual override gearbox is typically mounted between a pneumatic actuator and a quarter turn control valve to provide for manual valve operation in the event of air failure or for emergency operation. Under normal automatic operation, the gear is disengaged and the actuator turns freely to operate the valve. The gearboxes are suitable for indoor and outdoor use and combine rugged construction, light weight and modular design to provide the most efficient and cost effective solution to a full range of manual override requirements. The top and bottom drilling conforms to ISO5211 interface standards.

Specification

- Simple and compact design, light in weight.
- Will lock-and-hold the valve in any position.
- ISO 5211 connecting standard.
- IP65 weatherproof.
- Internal parts are pre-lubricated before delivery.

Instructions for installation and operation

- Connect the bottom side of the manual override gearbox to the valve and the bracket face to the pneumatic actuator. Then slide the valve shaft into the inner hole on the actuator until the valve shaft end is well matched with the square hole of the actuator.
- A tooth collision may occur when rotating the lever (by 180° outwards) to engage the worm. In such case, you need to turn the hand-wheel to a certain angle so that they can become engaged with each other.
- Actuating the device through pneumatic and manual simultaneously is not allowed.

Maintenance and storage

- Coreline Fig.522 manual override gearbox requires little maintenance. To ensure that the gearbox is always ready to operate, we recommend for the following measures. Three (3) months after commissioning and each year:
 - Check the bolts on top of the gearbox;
 - Check the bolts on the valve flange;
 - Perform a test run every six months;
 - Check the gearbox for leakage of grease;
 - For gearboxes with permanent vibration and exposure above 60°C, checks should be performed at shorter intervals.
- Store the gearboxes that are not installed indoors in a safe way to avoid accidents.
- Avoid storage in areas with high temperature, high humidity and/or dust.
- Protect against floor dampness by storage on a shelf or on a wooden pallet.
- Apply suitable corrosion protection agent to bare surfaces.

The content or parameters are indicative and can be changed without any notice.

Coreline

The contents of this catalogue are confidential and proprietary to Coreline, we reserve the right to change the specifications without any notice.

CORELINE LTD.

Add: No.4 Wangjiang Road, Muqiao Town, Zhengpugang New District, 238200 Hexian, Ma'anshan City, Anhui Province, China

Http: // www.coreline.dk

E-mail : mail@coreline.cn